


# New Features in WinCal

The following instruction defines step by step how to download information's from CALIBRATOR UNIQ into a PC.

Enter the BOGBALLE homepage  
[www.bogballe.com](http://www.bogballe.com)

- Products
- CALIBRATOR
- CALIBRATOR UNIQ
- Download WinCal

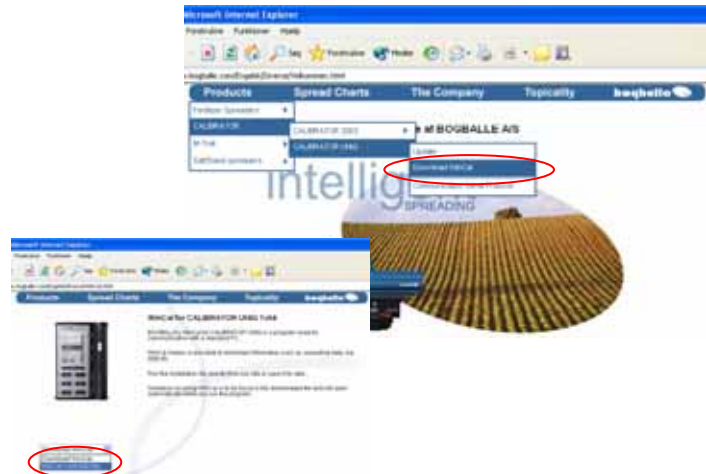


- Save WinCal at your desktop

- Go to your desktop and double click at the WinCal icon
- Confirm to make a folder "C:\CALIBRATOR\_UNIQ"
- Go to the folder "C:\CALIBRATOR\_UNIQ" and double click at the WinCal icon

The CALIBRATOR UNIQ must be connected +/-12 V and a serial RS232, 9 pin - Null modem cable.

- Set the CALIBRATOR UNIQ into "Data transfer mode / Boot loader" by pressing and holding the "ON" button in off mode for 5 seconds – until the red diode starts flashing.

- Choose "Upload Data".....uploading
- Choose "Export"
- Choose "Tab"
- Choose "browse" and define where to save the data file. File can be named.

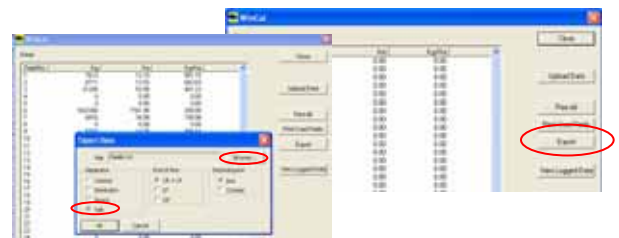

- Click on the data file at your desktop with the right mouse button
- Choose "Open with"
- Choose "Microsoft Office EXCEL" from the list of different programs
- .....and the data will be grouped in the EXCEL sheet for further use.